


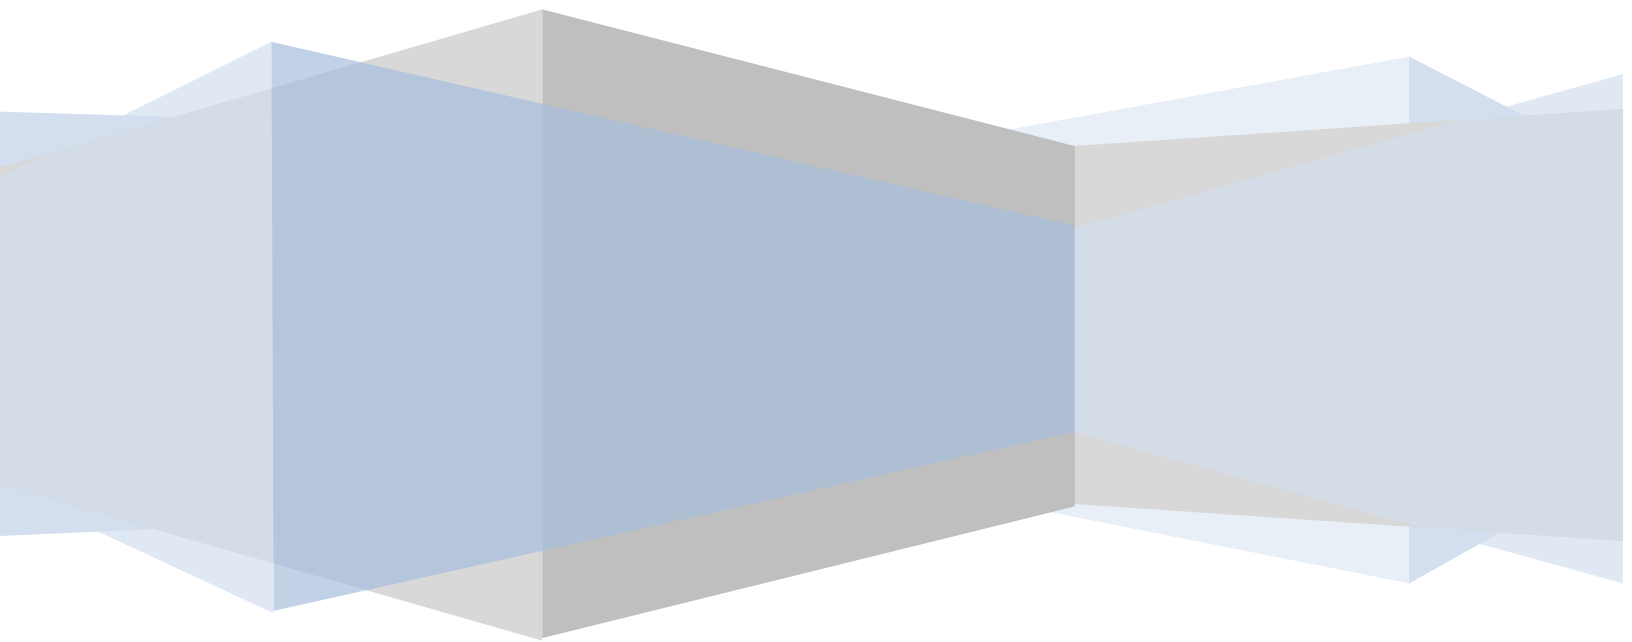

Honeywell Vista 15P/20P Customer User Guide

Getting Started with the Basics
Security Alarm Corporation



To ARM the system and go AWAY

1. Secure all doors and windows.
2. Enter your 4-digit USER code and press [2].
3. Red ARMED message will display.

To ARM the system and STAY in building

1. Secure all doors and windows.
2. Enter your 4-digit USER code and press [3].
3. Red ARMED message will display.
4. Motion detectors will be bypassed.

To ARM the system in INSTANT mode.

1. Secure all doors and windows.
2. Enter your 4-digit USER code and press [7].
3. Entry delay will be turned off and red ARMED be displayed.

To DISARM the system

1. Enter building through a delay door.
 - Control station will beep to remind you to disarm the system.
2. Enter your 4-digit code.
 - Red ARMED light should go off.

To CHANGE a MASTER code

1. Enter your 4-digit MASTER code.
2. Press [8] then 02.
 - User 02 is reserved for System Master.
3. Enter in new 4-digit MASTER code TWICE
(ex. 1234 8 02 5678 5678)
4. The keypad beeps once to confirm that new user was added.

To CHANGE a USER code

1. Enter your 4-digit MASTER code.
2. Press [8] + user number you wish to add.
 - Start with User 03 to 33
3. Enter in desired user's security code.
(ex. 1234 8 03 1111)
4. The keypad beeps once to confirm that new user was added.

To DELETE a USER code

1. Enter your 4-digit MASTER code
2. Press 8 + user number you wish to delete.
3. Press the pound [#] sign then [0]
(ex. 1234 8 03 # 0)

[DO NOT delete the MASTER code USER 02]

To activate EMERGENCY alarm

1. Press emergency button corresponding to the emergency type for 2 seconds.

To turn the DOOR CHIME ON/OFF

1. Enter your 4-digit USER code.
2. Press 9.
3. Repeat to turn off.

To BYPASS a ZONE

1. Enter your 4-digit USER code.
2. Press [6] + zone numbers.
(ex. 1234 6 02 or 11 – MUST BE TWO DIGITS).
3. Keypad will display ZONE BYPASSED when armed.

To CHANGE the system TIME/DATE

1. Enter your 4-digit MASTER code
2. Press [#] then [6] then [3]
3. Press [*] when the time/date is displayed. A cursor will appear in the first digit of the hour (To move ahead, press [*], backwards [#])
4. Enter the 2 Digit hours setting, 2 digit minute setting. Press [1] for PM or [2] for AM. Enter the last two digits of the current year. Enter the 2-digit month, Enter the 2-digit day.
5. To exit, press [*] when the cursor is at the last digit or, or wait 30 seconds.

To clear MEMORY LIGHT

Contact us if you are unaware of the recent alarm activation causing the MEMORY:

1. After disarming, enter USER code again.
2. Press OFF [1] key again.